



Inner Range T4000 TTL to Paradox Upload/Download Interface Cable P/N: 993041

This cable provides a serial communications path from an Inner Range T4000 Communicator to a compatible Paradox alarm panel for the purpose of upload/download programming of the Paradox panel only.

Installation:

1. Connect the White 4 Pin Connector onto the 4-Way polarized header labelled “Serial” on the Paradox Board. Note: Location of the “SERIAL” connector on the Paradox panel will vary depending on the Product.
2. Connect the Green 5-way Connector into the T4000 SERIAL connection, ensuring that the Blue Wire is on 0V. (RX & TX are on the “TTL” side)
NOTE: Earlier versions of this cable have a 3-way connector.



Visit the “Alarm Monitoring” section of the Inner Range Website for more information on the T4000 and Multipath IP Alarm Transmission.
www.innerrange.com



Inner Range T4000 TTL to Paradox Upload/Download Interface Cable P/N: 993041

This cable provides a serial communications path from an Inner Range T4000 Communicator to a compatible Paradox alarm panel for the purpose of upload/download programming of the Paradox panel only.

Installation:

1. Connect the White 4 Pin Connector onto the 4-Way polarized header labelled “Serial” on the Paradox Board. Note: Location of the “SERIAL” connector on the Paradox panel will vary depending on the Product.
2. Connect the Green 5-way Connector into the T4000 SERIAL connection, ensuring that the Blue Wire is on 0V. (RX & TX are on the “TTL” side)
NOTE: Earlier versions of this cable have a 3-way connector.



Visit the “Alarm Monitoring” section of the Inner Range Website for more information on the T4000 and Multipath IP Alarm Transmission.
www.innerrange.com