



INCEPTION – T4000 USB INTERFACE CABLE MANUAL

INNERANGE.COM

IMPORTANT NOTES

1. This version of the Inception to T4000 Interface cable connects to the “232” terminals of the T4000 ‘SERIAL’ connector. See diagram below.
2. This installation manual must be read in conjunction with the Inception Controller installation manual and the T4000 communicator installation manual.

The Inception-T4000 USB Interface cable allows an Inner Range T4000 Multipath-IP communicator to be connected to the USB port on an Inception Controller to provide multiple redundant 3G reporting paths in addition to internet reporting.

The T4000 can be powered from the Inception Controller VOUT power supply output (shown below), or from a separate battery-backed security system power supply. If powering the T4000 from VOUT on the Inception Controller, remember to allow for the current required by the T4000 (approx. 120mA) when calculating the Controller’s total output current.

When installed in the Small Enclosure with a T4000 Communicator, the Inception controller needs to be raised to provide access to the USB connector. Four threaded brass standoffs are provided in the Inception Controller installation kit which are used to raise the mounting plate or the controller.

Inception USB Port

If more than one device needs to connect to the USB Port, (e.g. T4000 and Wireless adapter) an Inception LAN Hub may be purchased to provide up to 4 USB Ports.



Disclaimer: While every effort has been made to ensure the accuracy of this manual, the manufacturer assumes no responsibility or liability for any errors or omissions. Due to ongoing development, product specifications and the contents of this manual are subject to change without notice.

Doc. P/N: 636797RS232



Global Headquarters

Inner Range **Australia**

+61 3 9780 4300

sales.au@innerrange.com

Inner Range **United States**

+1 (844) 588-0874

sales.usa@innerrange.com

Inner Range **United Kingdom**

+44 (0) 845 470 5000

sales.uk@innerrange.com

Inner Range **Canada**

+1 (844) 588-0874

sales.canada@innerrange.com

Inner Range **Middle East**

+971 4 8067100

sales.me@innerrange.com

Inner Range **India**

+91 80 4070 3333

sales.india@innerrange.com

INNERRANGE.COM