Integriti Operator Tenancies

Inner Range Pty Ltd
ABN 26 007 103 933

1 Millennium Court, Knoxfield, Victoria 3180, Australia
PO Box 9292, Scoresby, Victoria 3179, Australia
Telephone: +61 3 9780 4300 Facsimile: +61 3 9753 3499
Email: enquiries@innerrange.com Web: www.innerrange.com

Operator Tenancies


Operator Tenancies are programmed in Integriti using a combination of Sites and Keywords. These Sites and Keywords allow for easy assigning of operator permissions through the Operator Type window.

The following Programming steps are for a tenancy in a single panel site where the installer operator retains all access and two tenants are restricted to their respective permissions.

1. The Integriti panel is to remain under the default site.


2. Create three additional sites:
    a. Common: this will be used to provide permissions to entities that all tenants will have access to. e.g. primary entry door, entry area
    b. Tenancy 1
    c. Tenancy 2

3. In each of these sites a Keyword is to be created. The site is to resemble the following layout.

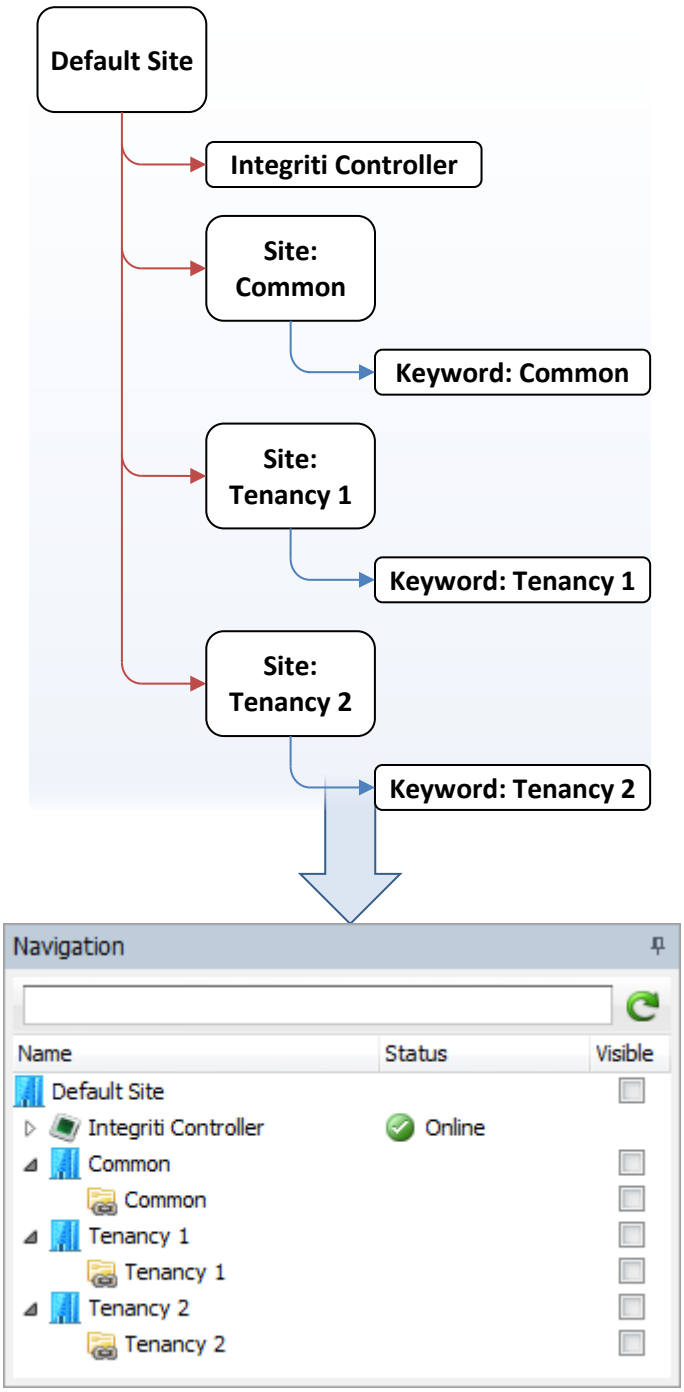


4. Create two new Operators and Operator Types. E.g. Tenant 1 & 2


5. In the Operator types the Tenant 1 Site Permissions will be limited to Common and Tenancy 1 sites. The ability for the tenant to add Subsite, Keyword or Delete a site can be changed here.

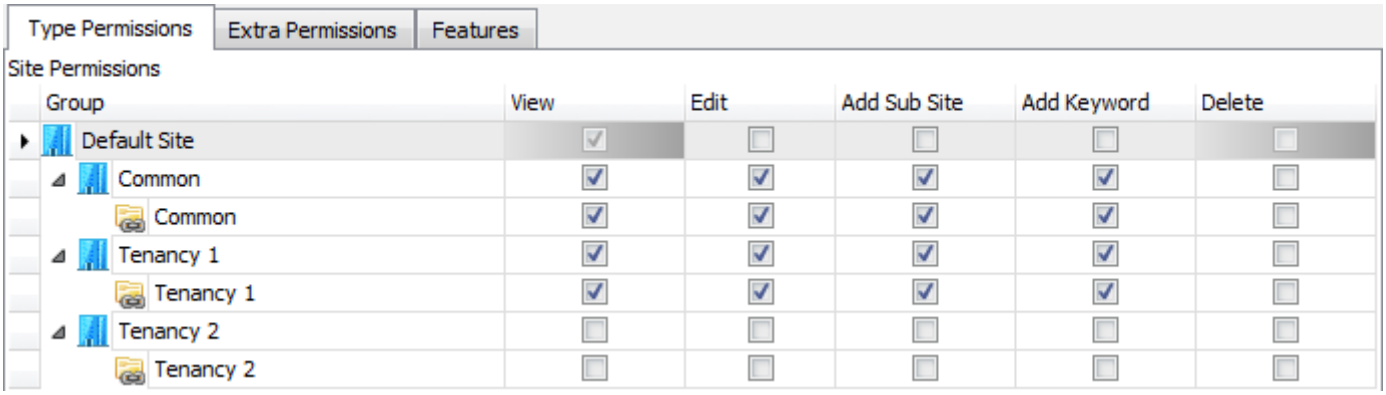

6. In the Entity Type Permissions while each site is individually selected the permissions must be set to Allow for the Common site and the Tenant site.

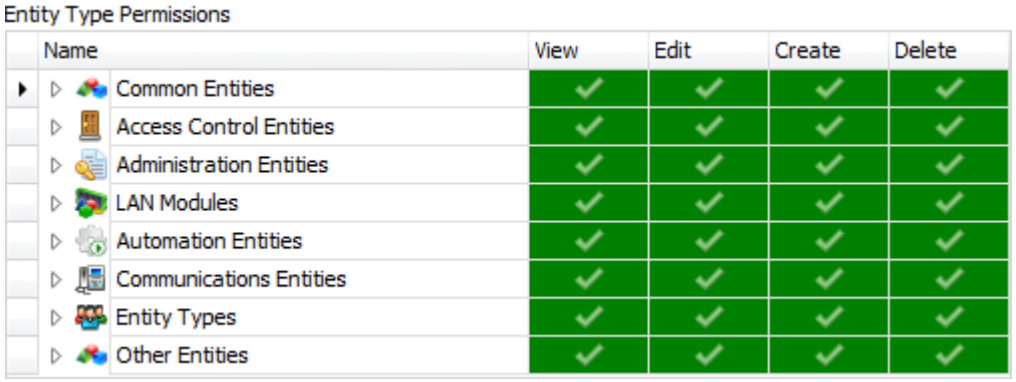


Make sure that the Default site and the other Tenancy sites are set to deny.

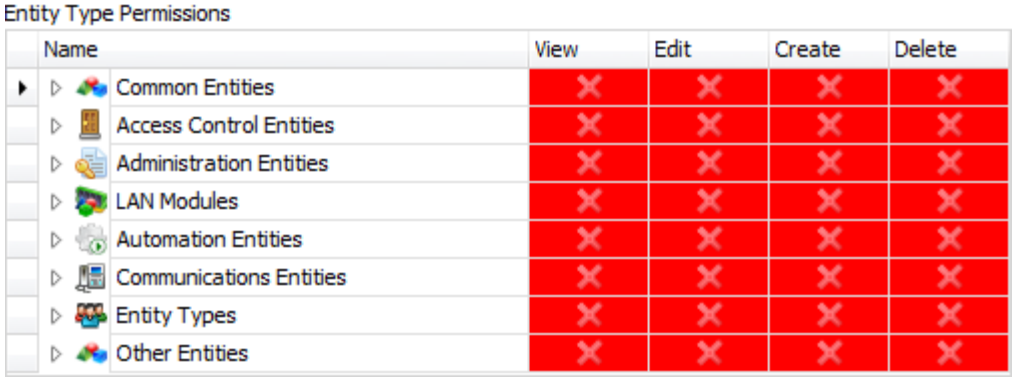

This will be the division in the entities for the use of tenancy.

Many entities in the system can relate to a specific site. This occurs when a new item is created while a specific site is highlighted. Alternatively the Installer can just drag and drop entities onto the specific site if they wish to change the site.
Below are users under Tenant 1 and others under Tenant 2 sites.

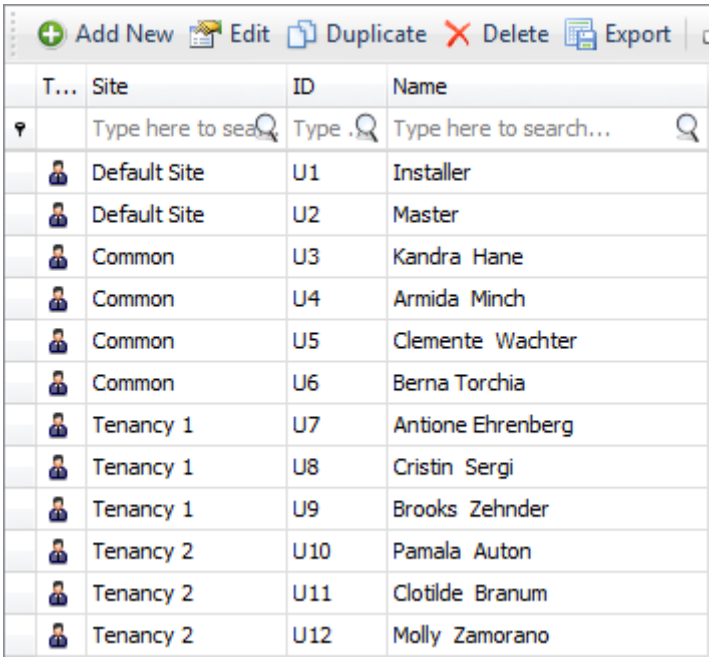

T...	Site	ID	Name
	Type here to sea	Type	Type here to search...
	Default Site	U1	Installer
	Default Site	U2	Master
	Common	U3	Kandra Hane
	Common	U4	Armida Minch
	Common	U5	Clemente Wachter
	Common	U6	Berna Torchia
	Tenancy 1	U7	Antione Ehrenberg
	Tenancy 1	U8	Cristin Sergi
	Tenancy 1	U9	Brooks Zehnder
	Tenancy 2	U10	Pamala Auton
	Tenancy 2	U11	Clotilde Branum
	Tenancy 2	U12	Molly Zamorano

As the tenants only have access to the common site and their own, any users they create will automatically be assigned to one of the two.

Entities that are not site specific but panel specific will need to be added to the keywords. The Installer can just drag and drop entities onto a specific Keyword to grant a certain operator access to that entity. Since the keywords are under the sites they inherit the 'allow' given in the operator types.

7. Once all the operator types permissions are set and the entities are in their Sites/Keywords logging in as either tenant only their specified items will be visible.